

Product Number: T1350 Application: '99-Current Super Duty

### **SAFETY**

#### Your safety and the safety of others is very important.

- In order to help you make informed decisions about safety, we have provided installation instructions and other information.
- These instructions alert you to potential hazards that could hurt you or others.
- Please do a job safety analysis (JSA) before each task to identify potential hazards for your situation and remove/protect against them.
- You must use your own good judgment, and take your time.

Read and understand all safety precautions and instructions before installing this product.

THIS PRODUCT IS FOR OFFROAD USE ONLY. ALL LIABILITY FOR INSTALLATION AND USE RESTS WITH THE OWNER.

CARELESS INSTALLATION AND OPERATION CAN RESULT IN SERIOUS INJURY OR EQUIPMENT DAMAGE.

### Injury hazard

#### Failure to observe these instructions could lead to severe injury or death.

Always remove jewelry and wear eye protection.
Always use extreme caution when jacking up a vehicle for work. Set emergency
brake and use tire blocks. Locate and use the vehicle manufacturers designated
lifting points. Use jack stands.
Always use appropriate and adequate care in lifting components into place.
Always insure components will remain secure during installation and operation.
Always wear safety glasses when installing this kit. A drilling operation will
cause flying metal chips. Flying chips can cause serious eye injury.
Always use extreme caution when drilling on a vehicle. Thoroughly inspect the
area to be drilled (on both sides of material) prior to drilling, and relocate any
objects that may be damaged.
Always use extreme caution when cutting and trimming during fitting.
<b>Always</b> tighten all nuts and bolts securely per installation instructions.
Always route electrical cables carefully. Avoid moving parts, components that
become hot and rough or sharp edges.
Always insulate and protect all exposed wiring and electrical terminals.
Always perform regular inspections and maintenance on mounts and related
hardware.





**Product Number: T1350 Application: '99-Current Super Duty** 

#### I. Parts List

- Ford Super Duty rear replacement bumper
- Tag Light
- 2 License plate mounting inserts
- 2 Reverse lights, mounting grommets, and wire pigtails
- 4 Backup sensor grommets
- 4 Backup sensor grommet plugs
- Instruction Manual

#### II. Tools Needed

- 3/4" Socket
- 3/4" Wrench
- Socket wrench
- Regular Screwdriver

#### III. Removal

- 1. Remove license plate, and OEM license plate lights. If so equipped, unplug back-up sensors.
- 2. With the bumper supported, remove (4) OEM bumper fasteners. Pull bumper rearward away from the truck. Save Factory hardware for reuse.



Figure 1





Product Number: T1350 Application: '99-Current Super Duty

#### IV. Installation

1. Replace OEM bumper with the Black Steel rear bumper assembly. Use the OEM fasteners in the OEM mounting locations to bolt the bumper in place. Align the bumper with the body and tighten all fasteners.

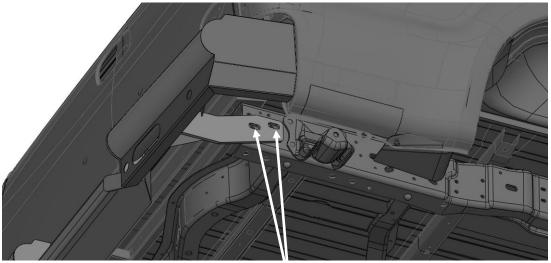


Figure 2

- 2. Slowly lower the tailgate to ensure there will be no interference. If required, loosen the frame bolts and adjust alignment of the bumper.
- 3. Install tag light into the 1 1/4" hole provided in the center section. The powder coating may need to be removed from the hole for proper grounding. Connect wire into the hot wire of OEM tag light circuit. Verify operation.
- 4. Reinstall license plate with provided plastic inserts
- 5. Install grommets into sensor holes. If equipped, insert sensors from the back side. If not equipped, install provided plugs into the grommets.
- 6. Insert light grommets into oval cut-outs and press lights in from the front. Wire as desired.
- 7. Secure all loose wiring and harnesses to the frame or bumper with zip ties.





Product Number: T1350 Application: '99-Current Super Duty


### V. Maintenance/Care

- ☐ Periodically check and tighten all fasteners.
- ☐ Stripped, fractured, or bent bolts or nuts need to be replaced.

### VI. Contact Information

Fab Fours Inc. Phone (866)-385-1905 1312 Camp Creek Rd Fax (866)-574-1424

Lancaster, SC 29720 Email Support@fabfours.com

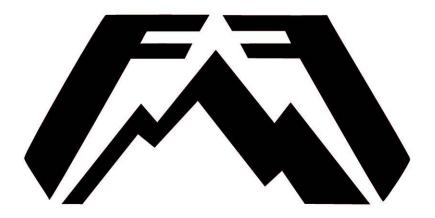

More than expected... Better than expected

