

Installation Instructions Added Support Bracket

Product Number: H195X Application: 09'-14' F150

Your safety and the safety of others is very important.

- In order to help you make informed decisions about safety, we have provided installation instructions and other information.
- These instructions alert you to potential hazards that could hurt you or others.
- Please do a job safety analysis (JSA) before each task to identify potential hazards for your situation and remove/protect against them.
- You must use your own good judgment, and take your time.

Read and understand all safety precautions and instructions before installing this product.

THIS PRODUCT IS FOR OFFROAD USE ONLY. ALL LIABILITY FOR INSTALLATION AND USE RESTS WITH THE OWNER.

CARELESS INSTALLATION AND OPERATION CAN RESULT IN SERIOUS INJURY OR EQUIPMENT DAMAGE.

SENSORS FIELD OF VIEW WILL BE ALTERED WITH USE OF THE REPLACEMENT BUMPER.

Injury hazard

Failu

are to observe these instructions could lead to severe injury or death.	
	Always remove jewelry and wear eye protection. Always use extreme caution when jacking up a vehicle for work. Set emergency
	brake and use tire blocks. Locate and use the vehicle manufacturers designated lifting points. Use jack stands.
	Always use appropriate and adequate care in lifting components into place. Always insure components will remain secure during installation and operation
	Always wear safety glasses when installing this kit. A drilling operation will
	cause flying metal chips. Flying chips can cause serious eye injury. Always use extreme caution when drilling on a vehicle. Thoroughly inspect the area to be drilled (on both sides of material) prior to drilling, and relocate any
_	objects that may be damaged.
	Always use extreme caution when cutting and trimming during fitting. Always tighten all nuts and bolts securely per installation instructions.
	Always route electrical cables carefully. Avoid moving parts, components that become hot and rough or sharp edges.
	Always insulate and protect all exposed wiring and electrical terminals. Always perform regular inspections and maintenance on mounts and related
_	hardware.



Installation Instructions Added Support Bracket

Product Number: H195X Application: 09'-14' F150

I. Bracket Installation


- 1. These brackets are installed during steps 1-5 of the H195X bumper installation.
- 2. During step 3 you will not use the provided backing plate. You will just affix factory nut plate straight to bumper bracket.
- 3. Once brackets are aligned during step 4 you will slide the added support bracket over frame on the backside of factory mounting flange.
- 4. During step 5 the ½" hardware will be replaced by the provided ½"x2" bolts. Make sure the hardware is installed as shown below.
- 5. You can now continue on with the H195X bumper installation portion of the manual.

Below are images of added support bracket installation.



Installation Instructions Added Support Bracket Product Number: H195X

Application: 09'-14' F150

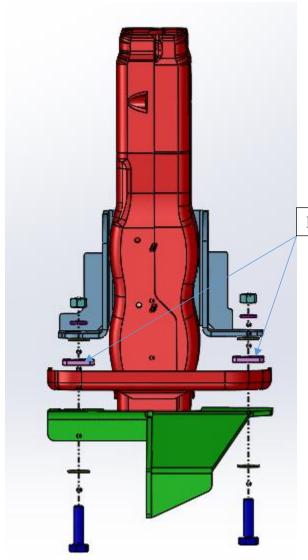



Provided 1/4" spacer.



Installation Instructions Added Support Bracket Product Number: H195X

Application: 09'-14' F150

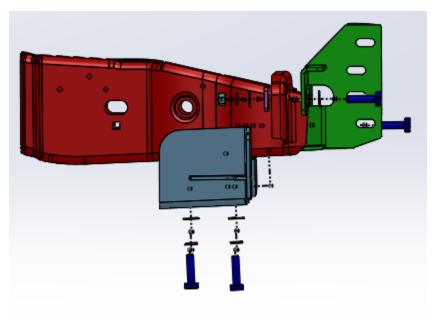

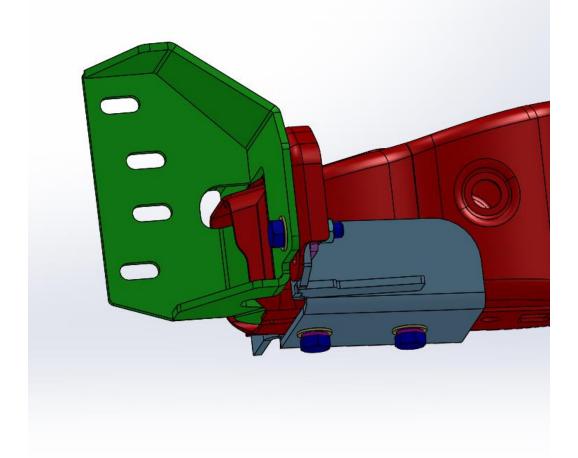



Installation Instructions Added Support Bracket

Product Number: H195X Application: 09'-14' F150

II. Maintenance/Care

☐ Periodically check and tighten all fasteners.


☐ Stripped, fractured, or bent bolts or nuts need to be replaced.

☐ Keep all surfaces free of dirt, road grime, and standing water to ensure finish longevity.

III. Contact Information

Fab Fours Inc. Phone (866)-385-1905 2213 Industrial Park Rd. Fax (866)-574-1424

Lancaster, SC 29720 Email Support@fabfours.com

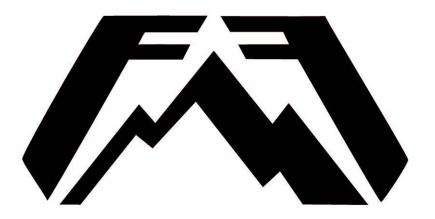

More than expected... Better than expected